

# Manual for Digital Thermometer DT-150

*Remove Battery Protection Seal before using.*

Press button to turn "ON". The temperature sensor is located at the pointed end of the probe.

The thermometer display shows "- -" if:

- The sensor is reading temperatures higher or lower than the specified range.
- The sensor has been damaged, perhaps by overheating.
- The battery voltage is low.

## Directions

- Insert probe.
- When measuring liquid, the sensor tip should be immersed 1" or more to obtain the quickest response time and most accurate reading.
- Not recommended for ambient use.
- Do not submerge thermometer in water; wipe with damp cloth only.

Replace the battery by removing the housing lid. Replacement batteries are LR44, 357 or A-76.

## Features

- F° / C° Switch
- Data Hold
- Water Resistant
- Drop Resistant
- On/Off Switch
- Protective Sheath with Pocket Clip
- 3 minute Auto Power Off
- ¼" Digits
- Accuracy +/- 2°F / 1°C
- Range : -40° - +300° F / -40° - +150° C
- Battery included